




TIGRES
Dr. Gerstenberg GmbH

Station ZX

Corona station for webs

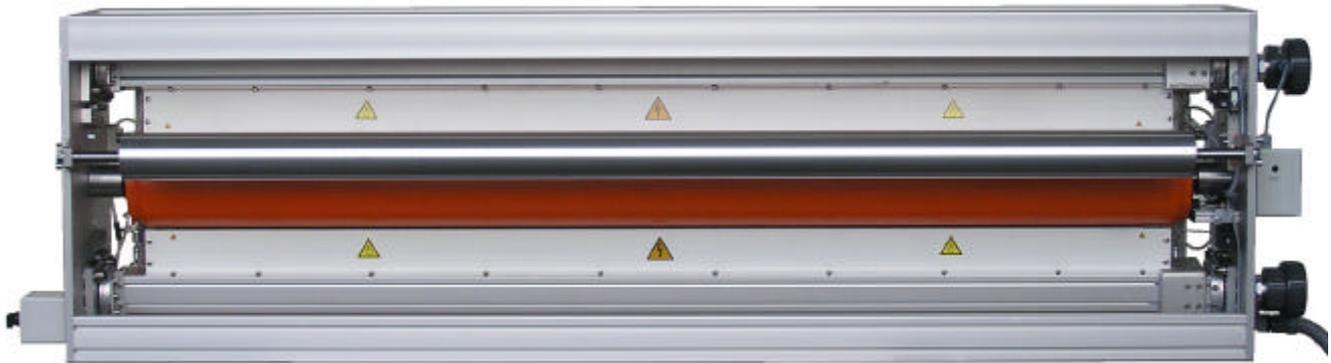

Option: treatment side in change



Highlights:

- User-friendly complete station
- Contact-less barrier discharge with two or three electrode bars
- Treatment roller made of aluminium adapted for any plastic or for plastic- and metal webs
- Pneumatically swiftable electrode

Technical information:

- Power continuously adjustable
- Treatment distance adjustable
- Adjustable position of guiding rollers
- Treatment roller \varnothing 160 mm with silicone tube, extruded silicone, dielectric ceramic or conductive ceramic
- Electrode with two or three electrode bars of metal or ceramic
- Integrated rotation control
- Exhaust as surveillance with sensor
- Robust oil-high voltage transformer
- Connection 230 V (up to 3 kW), else: 400 V; 50/60 Hz

Options:

- Two-side treatment
- One-side treatment in change
- Web width approx. 600 up to 4000 mm
- Optimisation for the requirement of customer



TIGRES Dr. Gerstenberg GmbH

Mühlenstraße 12, D-25462 Rellingen near Hamburg, GERMANY, T +49 - 4101 - 7778 - 88, tigres@tigres.de, www.tigres.de